

CAME.COM


Display module for modular entry panel



FA01474-EN



F© EAE

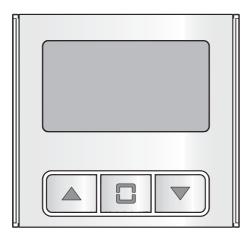

MTMDY

INSTALLATION AND PROGRAMMING MANUAL

EN English


General precautions

- Read the instructions carefully before beginning the installation and carry out the actions as specified by the manufacturer.
- The installation, programming, commissioning and maintenance of the product must only be carried out by qualified technicians, properly trained in compliance with the regulations in force, including health and safety measures and the disposal of packaging.
- Before carrying out any cleaning or maintenance operation, disconnect the device from the power supply.
- The equipment must be destined solely for the use for which it was expressly designed.
- The manufacturer declines all liability for any damage as a result of improper, incorrect or unreasonable use.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- 1 This device may not cause harmful interference.
- 2 This device must accept any interference received, including interference that may cause undesired operation.

DESCRIPTION

Display module connected and powered via BUS.

 Δ Module assembly or removal must take place while the entry panel is not powered.

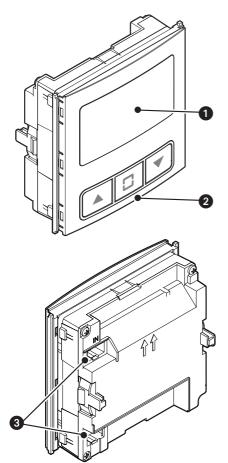

Displ	ay
----------------	----

- Navigation buttons
- 3 Outlets for connection to other modules

Technical data

Туре	MTMDY	
Power supply (V DC)	10.7 to 18	
MAX current draw (mA)	250	
MIN current draw (mA)	55	
Storage temperature (°C)	-25 to +70	
Operating temperature (°C)	-25 to +55	
Protection rating (IP)	54	

CONFIGURING THE MODULE



Accessing configuration mode


Press and hold the **A v** buttons at the same time until the password entry screen shown in figure A appears (default password 1234).

Use the ▲▼ buttons to enter the first of the four numbers that make up your password. Press


to confirm and move on to the next number.

Once you have entered the correct password, you can access the dedicated module configuration section B.

Use the \blacktriangle buttons to scroll through the various parameters to configure. Press \Box to access the configuration options.

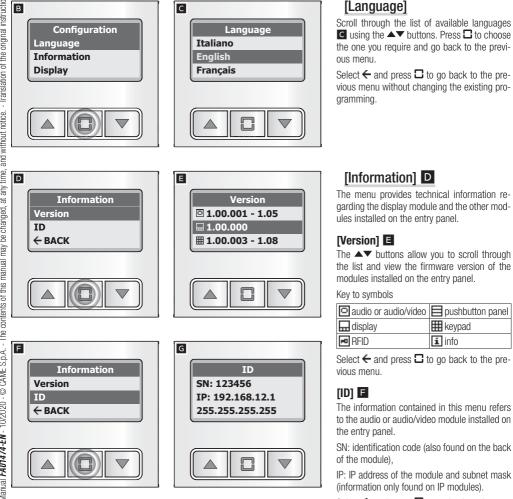



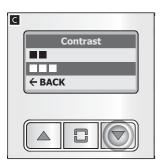



From the main menu \blacksquare , use $\blacktriangle \lor$, to select [Display] and press \square to access the configuration options.

[Display] B

The menu allows you to adjust all the parameters relating to display lighting.

[Contrast] C

The ▲▼ buttons allow you to scroll and simultaneously view the available contrast levels. Press □ to choose the required level and go back to the previous menu.

Select \leftarrow and press \square to go back to the previous menu without changing the existing programming.





[Backlight] D

[Colour] E

The ▲▼ buttons allow you to choose the colour of the display backlight.

Press $\hfill\square$ to confirm your choice and go back to the previous menu.

Select \leftarrow and press \square to go back to the previous menu without changing the existing programming.

F	
	Brightness

[Brightness] F

The $\checkmark V$ buttons allow you to scroll and simultaneously view the available brightness levels.

Press $\ensuremath{\square}$ to choose the required level and go back to the previous menu.

Select \Leftarrow and press \square to go back to the previous menu without changing the existing programming.







The AV buttons allow you to determine the behaviour of the display module after 30 seconds of inactivity.

OFF = The backlight is always on.


ON = The screen dims the display until a button is pressed.

If you choose to activate the [Standby] function (ON), pressing \square allows you to access the window for adjusting brightness in Standby mode \blacksquare .

The $\checkmark \nabla$ buttons allow you to scroll and simultaneously view the available brightness levels for Standby mode.

Press 🗖 to confirm your choice and go back to the previous menu.

Select \leftarrow and press \square to go back to the previous menu without changing the existing programming.

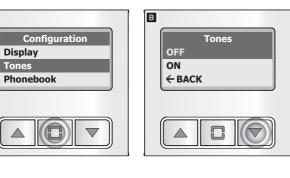

C Phonebook Search intervals Interval limit Change name



From the main menu \blacksquare , use $\frown \nabla$, to select [Tones] and press \square to access the configuration options.

[Tones] B

The \blacktriangle buttons are used to activate/deactivate tones.

Press \square to confirm your choice and go back to the previous menu.

Select \leftarrow and press \square to go back to the previous menu without changing the existing programming.

[Phonebook]

The menu allows you to configure the way in which the names in the phonebook are displayed in order to facilitate the user in searching for the required name.

It also allows the names in the directory to be locally modified

[Search intervals] D


The ▲▼ buttons allow you to choose into how many parts to divide the phonebook.

 $\ensuremath{\mathsf{Press}}\xspace$ to confirm your choice and go back to the previous menu.

Select - and press - to go back to the previous menu without changing the existing programming.

N.B. If you choose option [1], the phonebook name list will not be divided up in any way.

Α

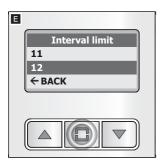



G			
	1	2 ABC	3 DEF
	4 GHI	5 JKL	6 MNO
	7 PQRS	8 TUV	9 WXYZ
	JL	0	<i>"</i> ζ\]

[Interval limit]

The ▲▼ buttons allow you to choose the maximum number of permissible names for each search range. Below this limit, the phonebook is not divided up any further.

Press 🗖 to confirm your choice and go back to the previous menu.

Select \leftarrow and press \square to go back to the previous menu without changing the existing programming.

[Edit name]

The edit name menu initially displays as a straight list of names of users.

Use the \blacktriangle and \checkmark buttons to choose the name to be edited.

Press button **I** to confirm your choice and access the edit menu.

Select \leftarrow at the end of the list of names and press button \Box to go back to the previous menu without changing the existing programming.

Edit name menu

Once you have selected the name to be edited, the first line displays the name being edited.


Note: to change the selected name, you need an MTMKB keypad G.

Press the button corresponding to the desired letter until it is displayed on the first line. Repeat for all of the following characters.

Use the \blacktriangle and \checkmark buttons to choose the operation to be performed.

Press button I to perform the selected operation (Save to save the new name, Delete character to delete the last character entered).

Select \leftarrow and press button \square to go back to the previous menu without changing the existing programming.

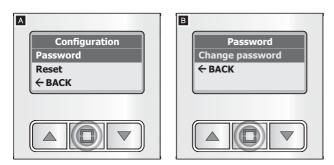

straight list of names of users. ame to be edited. d access the edit menu. and press button ☐ to go back to the previous amming. • edited, the first line displays the name being • need an MTMKB keypad G. sired letter until it is displayed on the first line. • operation to be performed. operation to be performed. operation (Save to save the new name, Delete ered). ck to the previous menu without changing the ered. ck to the previous menu without changing the ered. • from the main menu A, use A, to select [Password] and press ☐ to change the password. Press ☐ to change the current password and without changing the existing password. Press ☐ to change the current password and Lise the A buttons to enter the first of the

Use the **A** buttons to enter the first of the





four numbers that make up the old password. Press $\hfill\square$ to confirm and move on to the next number.

Once you have entered all the numbers in the old password \subseteq , enter the new password as required \square \blacksquare .





From the main menu \blacksquare , use $\blacktriangle \nabla$, to select [Reset] and press \square .

[Reset] F

Select \leftarrow and press \Box to go back to the previous menu without resetting.

Press 🗖 to reset and return the entry panel to its factory settings.

The product complies with the applicable reference directives.

Dismantling and disposal. Dispose of the packaging and the device properly at the end of its life cycle, according to the regulations in force in the country where the product is used. The recyclable components bear the symbol and code for the material.

THE DATA AND INFORMATION PROVIDED IN THIS MANUAL ARE SUBJECT TO CHANGE AT ANY TIME WITHOUT PRIOR NOTICE.

MEASUREMENTS, UNLESS OTHERWISE INDICATED, ARE IN MILLIMETRES.

CAME T BPT

CAME S.P.A.

Via Martiri Della Libertà, 15 31030 Dosson di Casier - Treviso - Italy tel. (+39) 0422 4940 - fax. (+39) 0422 4941